



THE PENNSYLVANIA RAILROAD COMPANY
ACCOUNT AND OPERATION CODES
MAINTENANCE OF EQUIPMENT DEPARTMENT
ENGINEHOUSES

Oper. No	Description	Equipment	Prod.-Unit	Loc.
1-10	Inspection and Running Repairs on Leading Road and Road Switcher Locomotive	Road Loco.	Loco.Unit	
1-11	Inspection and Running Repairs on Supporting Units-Road and Road Switcher Locomotives	Road Loco.	Loco.Unit	
1-12	Inspection and Running Repairs on Switching Locomotives-Except LS 25 and BS 24	D. E. Switchers	Loco.Unit	
1-13	Inspection and Running Repair-Leading and Trailing A-Passenger Units	D.E. Road Pass.Units	Loco.Unit	
1-14	Inspection and Running Repair Supporting A or B Passenger Units	D.E. Road Pass.Units	Loco.Unit	
1-15	Inspection and Running Repairs on Switching Locomotives-LS 25 and BS 24 only	D. E. Switchers	Loco.Unit	
1-16	Inspection of Passenger Locomotives in Thru Train Service	D.E. Pass. Loco.Unit	Loco.Unit	
1-20	Inspect Steam Generator-1 Generator	D.E. Locos	Loco.Unit	
1-21	Inspect Steam Generator-2 Generators	D.E. Locos	Loco.Unit	
1-25	Test Train Phones-During Daily Inspection	D.E. Locos	Loco.Unit	
1-30	Cab Signal Test-During Daily Inspection	Rd&Rd/Yard Switchers	Loco.Unit	

Oper.No	Description	Equipment	Prod.-Unit	Loc.
1-40	Viscosity Test of Lubricating Oil-Viscosimeter	D.E. Locos	Test	
1-41	Viscosity Test of Lubricating Oil-Visgag	D.E. Locos	Test	
1-50	Cooling Water Test-Performed with other Servicing Operations	D.E. Locos	Loco.Unit	
1-71	Renew Angle Cock-Operation Performed at Running Repairs Location	D.E. Locos	Angle Cock	
1-72	Renew Brake Shoe-Operation Performed at Running Repairs Location	D.E. Locos	Brake Shoe	
1-73	Renew Cab Window Glass-Operation Performed at Running Repairs Location	D.E. Locos	Piece	
1-410	Servicing Leading Road Locomotive Unit-Fuel and Sand Facilities, Not Fuel Truck	D.E. Rd&Rd Switchers	Loco.Unit	
1-411	Servicing Leading and Trailing Passenger Road Locomotives-Fuel and Sand Facilities, Not Fuel Truck	D.E. Road Passenger Units	Loco.Unit	
1-416	Add Water to Passenger Locomotives in Thru Train Service	D.E. Pass. Loco.Units	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc.
1-420	Servicing Supporting (A or B) Road Locomotive Unit-Fuel and Sand Facilities, Not Fuel Truck	D.E. Rd&R Switchers	Loco.Unit	
1-421	Servicing Supporting A or B Passenger Road Locomotive-Fuel and Sand Facilities, Not Fuel Truck	Pass. Road Units	Loco.Unit	
1-440	Service Switcher Locomotive-Fuel and Sand Facilities, Not Fuel Truck-LS 25 or BS 24 only	D. E. Switchers	Loco.Unit	
1-450	Servicing Switcher Locomotive-Fuel and Sand Facilities, Not Fuel Truck	D. E. Switchers	Loco.Unit	
1-710	Add Units To, or Set Off Units From-Middle of Locomotive	Multiple Units	Loco. Makeup	
1-711	Add Units to or Remove Units From-End of Locomotive	Multiple Units	Loco. Makeup	
1-730	Change Control Air Hose from One Side of Locomotive to the Other-Done with Operation of Addition of Units	All Locos.	Control Hose Set	

Oper. No.	Description	Equipment	Prod.-Unit	Loc.
1-740	Turn Locomotive on Turntable-Locomotive not Overlength for Turntable (Separate Standard for Cutting Units)	All Locos.	Occur.	
1-750	Turn Locomotive on Wye	All Locos.	Loco.Unit	
1-760	Operate Transfer Table-Locomotive Units Moving Under Own Power Only	Loco.Units	Loco.Unit	
1-770	Move Unit from Fuel Rack or Outbound Storage to Enginehouse or Spur Track Storage	Loco.Unit	Occur.	

Oper. No.	Description	Equipment	Prod.-Unit	Loc.
2-10	Monthly Inspection Mechanical Portion	AS & BS 1200 HP and under	Loco.Unit	
2-11	Monthly Inspection Mechanical Portion	AS 16, 18 BS 16	Loco.Unit	
2-12	Monthly Inspection Mechanical Portion	FS 16, 20	Loco.Unit	
2-13	Monthly Inspection Mechanical Portion	ES 6, 10, 12	Loco.Unit	
2-14	Monthly Inspection Mechanical Portion	FS 10, 12	Loco.Unit	
2-15	Monthly Inspection Mechanical Portion	ES 15m, 17m, EFS 17m	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc.
2-16	Monthly Inspection Mechanical Portion	LS 25&25m	Loco.Unit	
2-18	Monthly Inspection Mechanical Portion-EF 15, 15A, EH and EFP 15		Loco.Unit	
2-19	Monthly Inspection Mechanical Portion	EP 22 D.E. Loco.	Loco.Unit	
2-20	Cylinder Air Test (Blow-by Test)-Engine Stopped for Operation	6 Cylinder	Loco.Unit	
2-21	Cylinder Air Test (Blow-by Test)-Engine Stopped for Operation	8 Cylinder	Loco.Unit	
2-22	Cylinder Air Test (Blow-by Test)-Engine Stopped for Operation	10Cylinder	Loco.Unit	
2-23	Cylinder Air Test (Blow-by Test)-Engine Stopped for Operation	12 Cylinder	Loco.Unit	
2-24	Cylinder Air Test (Blow-by Test)-Engine Stopped for Operation	16 Cylinder	Loco.Unit	
2-25	Cylinder Air Test (Blow-by Test)-Engine Stopped for Operation	24 Cylinder	Loco.Unit	
2-30	Remove and Replace Air Gages-B Units-All AF, EF, EP, FF, EFP and EP B Units		Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc.
2-31	Renew Distributing Valve	All Switchers	Valve	
2-32	Renew Air Brake Feed Valve-Enginehouse Stall	All Switchers	Feed Valve	
2-33	Locomotive Air Brake Inspection (6 month inspection)-D.E. Locomotives with 24 RL and 26L Air Brake Equipment		Inspection	
2-34	Inspect and Weigh Portable Fire Extinguishers (6 month inspection)	All Locos.	Loco.Unit	
2-35	Drain and Refill Engine Governor (6 month inspection)-D.E. Locomotives Equipped with Woodward Hydraulic Governor		Governor	
2-36	Remove and Replace Air Gauges-Yard Switcher		Loco.Unit	
2-37	Inspect and Test Engine Timing and Fuel Injection Pump Rack Setting (6 month inspection)	All 16 Cylinder ES Locos.	Occur.	
2-38	Remove and Replace Air Gauges	D.E. Road Switchers	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc
2-39	Remove and Replace Air Gauges-All AF, BF, EF, FF, EFP and EP - A and B Units		Loco.Unit	
2-40	Inspect Coupler Pins-Baldwin and EMD Switcher Units		Loco.Unit	
2-41	Renew Air Brake Independent Brake Valve-Engine-house Stall	All D.E. Locos.	Brake Valve	
2-43	Renew E.M.D. Fuel Injector	E.M.D.-D. E. Locos.	Loco.Unit	
2-44	Inspect Diaphragm on Three Compartment Reservoir (24 month inspection item)	All D.E. Locos.	Loco.Unit	
2-45	Annual Air Brake Inspection-D. E. Locomotives-24 RL Brake Equipment		Loco.Unit	
2-46	Test Single Air Gauge	D.E. Locos	Gauge	
2-47	Test Duplex Air Gauges	D.E. Locos	Gauge	
2-48	Test Fuel Injector	All Fuel Injectors	Injector	
2-50	Hammer and Hydrostatic Test of Main Reservoirs-Cooling Coils not Mounted on Air Reservoirs-BS 6, 7, 10, 12 - AS 16, 18 - ES 6, 10		Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc.
2-51	Hammer and Hydrostatic Test of Main Air Reservoir-Cooling Coils Mounted on Air Reservoirs	ES 12	Loco.Unit	
2-52	Hydrostatic Test of Main Air Reservoirs-Cooling Coils not Mounted on Air Reservoirs-BS 6, 7, 10, 12, 16 - AS 16, 18 - ES 6, 10 - FS 20		Loco.Unit	
2-53	Hydrostatic Test of Main Air Reservoirs-Cooling Coils Mounted on Reservoirs	ES 12	Loco.Unit	
2-60	Apply Shims to Traction Motor Suspension Pad-Work from Inspection Pit	All Switchers	Traction Motor	
2-61	Change Position of Brake Parallel Bar Adjustment Rod-Brake Adjustment Only, Not to be Applied with "Renew Brake Shoe" Labor Time Standard	All D.E. Locos.	Brake Adjustment	
2-62	Cut One Locomotive Wheel Flange	D. E. Switchers	Wheel	
2-63	Remove and Install Cylinder Head Piston Rod, Liner and Water Jacket-All Alco Model 244 Diesel Engines		Engine Cylinder	

Oper. No	Description	Equipment	Prod.-Unit	Loc
2-64	Disassemble, Clean Magnaflux and Assemble Cylinder Head, Piston, Rod, Liner and Water Jacket-Piston Liner Assembly Previously Removed (Covered by Separate Standard)-All Alco Model 244 Diesel Engines	BS 6, 10, 12	Engine Cylinder	
2-65	Engine Hydrostatic Test-Enginehouse Stall		Loco.Unit	
2-66	Inspect Cam Assembly-Baldwin Diesel Electric Switchers		Loco.Unit	
2-67	Inspect or Renew Connecting Rod Bearing-All Baldwin 600 Series-6 Cylinder Engines		Loco.Unit	
2-68	Remove and Apply Traction Motor-Truck Previously Removed-Wheels Not Removed from Truck-All D. E. Locomotives Except 3 TM Trucks		Traction Motor	
2-69	Remove and Apply Wheels, Truck Removed from Locomotive-Truck Previously Removed-All Trucks with Friction Type Journal Bearings		Pair Wheels	
2-70	Remove Truck from and Apply Truck to Locomotive Unit-All D.E. Locomotives Except 3 TM Trucks		Truck	

Oper. No	Description	Equipment	Prod.-Unit	Loc
2-71	Renew Angle Cock	D.E.Locos.	Angle Cock	
2-72	Renew Brake Shoe	D.E.Locos.	Shoe	
2-73	Renew Cab Window Glass-All D.E. Switcher Locos.		Piece	
2-74	Renew Connection of Power Contactor Pipe	D.E. Switcher	Pipe Con- nection	
2-75	Renew Coupler	D. E. Switchers	Coupler	
2-76	Remove, Inspect and Install Cylinder Head-D. E. Alco Switchers		Cylinder	
2-77	Renew Engine Shutdown Cylinder Gasket-Baldwin Diesel Electric Switcher		Gasket	
2-78	Remove and Apply Fuel Injector	All AS,BS Locos.	Injector	
2-79	Install Marman Radiator Hose Coupling-Gaskets Made as Part of Operation	BS 6, 7, 10, 12	Hose Coupling	
2-80	Renew Springs in Traction Motor Suspension Pad- Work from Inspection Pit	All Yard Switchers	Traction Motor	
2-81	Remove and Renew Power Wheels-Truck and Traction Motor Not Removed	EP 22 Pass Loco.	Pair of Wheels	

Oper. No	Description	Equipment	Prod.-Unit	Loc
2-82	Remove and Apply Fuel Injector	All FS and FF Locos.	Injector	
2-83	Remove and Install Piston Cylinder Liner	LS 25	Piston- Liner Assembly	
2-84	Turn Locomotive Wheels-Traction Motor Attached	40" Loco. Wheels	Pair of Wheels	
2-85	Turn Locomotive Wheels-Journal Boxes Removed from and Reapplied to Wheels	36" Loco. Wheels	Set of Wheels	
2-86	Inspect and Recondition Diesel Engine Cylinder Head-Head Previously Removed	Alco Cylinder Head	Cylinder Head	
2-87	Mount Traction Motor-Overhead Crane, AFS 17M Diesel Locomotive Wheels		Traction Motor Wheel	
2-88	Renew Wheels-Traction Motor Assembly-Assembly Removed from Truck	D. E. Locos.		
2-89	Remove Wheels from Traction Motor Assembly- Traction Motor Assembly Removed from Truck, Traction Motor to be Repaired	D. E. Locos.	Occur.	

Oper. No	Description	Equipment	Prod.-Unit	Loc
2-91	Assemble Wheels to Repaired Traction Motor- Traction Motor Wheel Assembly not in Truck	D. E. Locos.	Assembly	
2-92	Orifice Test of Air Compressor (3 month inspection)-All Diesel Locomotives with 1 Air Compressor		Unit	
2-93	Remove and Replace #6 and #14 Air Brake Equip- ment (6 month inspection)	Switcher Loco.	Unit	
2-94	Remove and Replace #6 and #14 Air Brake Equip- ment (12 month inspection)	Switcher Loco.	Unit	
2-97	Renew EMD Valve Lasher-2 Lashers Per Cylinder	EMD Diesel Locos.	Cylinder	
2-98	Renew EMD Rocker Assembly	EMD Diesel Locos.	Rocker Assembly	
2-99	Renew EMD Cylinder Head-EMD Only	EMD Diesel Locos.	Assembly	
2-100	Renew EMD Power Assembly-"B" Liner-Blade Rod	EMD Diesel Locos.	Assembly	
2-101	Renew EMD Power Assembly-"B" Liner-Fork Rod	EMD Diesel Locos.	Assembly	

Oper. No	Description	Equipment	Prod.-Unit	Loc
2-102	Renew EMD Power Assembly-"C" Liner-Blade Rod	EMD Diesel Locos.	Assembly	
2-103	Renew EMD Power Assembly-"C" Liner-Fork Rod	EMD Diesel Locos.	Assembly	
2-104	Renew Fuel Oil Pressure Gauge	FS 10, 12, 16, 20, 24	Occur.	
2-105	Test Fairbanks Fuel Injector	F. M. Injectors	Injector	
2-200	Monthly Inspection-Mechanical Portion-Diesel Electric Locomotives - Process Line	D. E. Locos.	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc
3-13	Change Air Compressor Strainers and Breathers	LS 25,25M	Air Com- pressor Strainer	
3-20	Change Engine Air Intake Filters-Change Only, Not Cleaning-Other than FM with Can Type Filters	All D.E. Switchers	Loco.Unit	
3-21	Change Car Body Air Filters-Change Only, Not Cleaning	ES 17	Loco.Unit	
3-22	Change Engine Air Intake Filters-Change Only, Not Cleaning	LS 25, LS 25M	Loco.Unit	
3-23	Change Engine Air Intake Filters-Change Only, Not Cleaning-Filters Delivered and Taken Away from Unit by Stores Department	BF 15, 16	Loco.Unit	
3-24	Change or Service Engine Air Intake Filters- Cleaning of Filters not Included	EF, EH and EFP 15 Loco	Loco.Unit	
3-25	Change Car Body Filters	BF 15, 16	Loco.Unit	
3-26	Change Car Body Filters-Cleaning of Filters not Included	EF, EH and EFP Locos.	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc.
3-30	Renew Fuel Oil Filter-Change Only, Not Cleaning	All D.E.	Loco.Unit	
3-40	Renew Lubricating Oil Filters-Change Only, Not Cleaning	All BS	Loco.Unit	
3-41	Renew Lubricating Oil Filters-Change Only, Not Cleaning	AS Road Locos.	Loco.Unit	
3-42	Renew Lubricating Oil Filters-Change Only, Not Cleaning	AS 10	Loco.Unit	
3-43	Renew Lubricating Oil Filters-Change Only, Not Cleaning	ES 6, 10, 12	Loco.Unit	
3-44	Renew Lubricating Oil Filter-Change Only, Not Cleaning	AF 16	Loco.Unit	
3-45	Renew Lubricating Oil Filters-Change Only, Not Cleaning	BF 15, 15A 16	Loco.Unit	
3-46	Renew Lubricating Oil Filters-Change Only, Not Cleaning	ES 17	Loco.Unit	
3-47	Renew Lubricating Oil Filters-Change Only, Not Cleaning	FS 16, 20	Loco.Unit	
3-48	Renew Lube Oil Filters	EF, EH and EFP 15	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc
3-50	Remove, Clean and Apply Fuel Oil Strainer	All D. E.	Strainer	
3-60	Remove, Clean and Apply Lube Oil Strainers-All Diesel Electric Locomotives with Nugent Type Strainers-Except LS 25		Loco.Unit	
3-61	Remove, Clean and Apply Lube Oil Strainers	ES 6, AS 10	Loco.Unit	
3-62	Remove, Clean and Apply Lube Oil Strainers	LS 25, 25M	Loco.Unit	
3-63	Remove, Clean and Apply Lube Oil Suction Strainers	Baldwin 600 Series	Loco.Unit	
3-64	Remove and Apply Lube Oil Strainers-Cleaning of Strainer not Included	EF, EH and EFP 15	Loco.Unit	
3-100	Change Required Filters, Strainers and Breathers	EF 15, 16	Loco.Unit	
3-101	M.I. Change of Filters and Strainers-Cleaning of Filters and Strainers not Included	FS 10	Loco.Unit	
3-102	M.I. Change of Filters and Strainers-Cleaning of Filters and Strainers not Included	EF 15, EFP 15, EH 15	Loco.Unit	
3-150	Change/Service Fuel Oil Strainers and Filters	EF 15, EH 15, EFP 15	Loco.Unit	
3-200	Monthly Inspection-Filter and Strainer Portion Diesel Electric Locomotives-Process Line	D. E. Locos.	Loco.Unit	

Oper. No.	Description	Equipment	Prod.-Unit	Loc.
4-10	Lubricate Locomotive Unit (Road Switchers)-Road Switchers Over 1200 HP with Roller Bearing Journals	Not ES 17 & LS 25	Loco.Unit	
4-11	Lubricate Locomotive Unit (Yard Switcher)-Yard Switcher (1200 HP and Below) with Friction Bearing Journals	D. E. Yard Switchers	Loco.Unit	
4-12	Lubricate Locomotive Unit	ES 17	Loco.Unit	
4-13	Lubricate Locomotive Unit	LS 25, 25M	Loco.Unit	
4-14	Lubricate Locomotive Unit	BF 15, 16	Loco.Unit	
4-16	Change Lubricating Oil-AS 6, 8, 10-ES 6, 10-GS 4		Loco.Unit	
4-17	Change Lubricating Oil-BF 15, 16-AS 16, 18-ABF 18-EFS 17-BS 6, 7, 10, 12, 16-EF 15-AF 15, 16-APS 24-ES 12, 15, 17		Loco.Unit	
4-18	Change Lubricating Oil-AS 24-FS 10, 12, LS 25		Loco.Unit	
4-19	Change Lubricating Oil-BS 24, FS 16, 20, 24, FF 16, 20-BP 20-EP 20, 22-AFP 20		Loco.Unit	
4-20	Change Lubricating Oil-Oil Stored in Steel Drum Containers-ES 10, 12-BS 6A, BS 7, 12		Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc.
4-21	Renew Lubricating Oil-Pump from and to Storage Tanks-BS 6A, 7, 10A, 12-ES 10, 12		Loco.Unit	
4-30	Viscosity Test of Lube Oil-Viscosimeter	All Locos.	Test	
4-31	Viscosity Test of Lube Oil-Visgage	All Locos.	Test	
4-40	Drain Air Compressor Lubricating Oil Flush and Refill	One Compressor	Loco.Unit	
4-41	Drain Air Compressor Lubricating Oil Flush and Refill	Two Com- pressors	Loco.Unit	
4-50	Service Speed Recorder	All D. E. Locos.	Loco.Unit	
4-200	Monthly Inspection-Lubrication Portion-Diesel Electric Locomotives-Process Line	D. E. Locos.	Loco.Unit	

Order No.	Description	Equipment	Prod.-Unit	Loc.
5-9	M. I. and Test of Cab Signal and Train Phone	All Locos.	Loco.Unit	
5-10	M. I. Electrical Portion-All D. E. Locomotives 1200 HP and Under		Loco.Unit	
5-11	M. I. Electrical Portion-D. E. Road Switchers Over 1200 HP	4 Traction Motor	Loco.Unit	
5-12	M. I. Electrical Portion-D. E. Road Switchers Over 1200 HP	6 Traction Motor	Loco.Unit	

Oper.No	Description	Equipment	Prod.-Unit	Loc
5-13	M. I. Electrical Portion	LS 25	Loco.Unit	
5-16	M. I. Electrical Portion-EP 20 and EP 22 Diesel Electric Locomotives		Loco.Unit	
5-18	M. I. Electrical Portion	EF, EH, EFP 15	Loco.Unit	
5-20	Blow Out All Electrical Rotating Apparatus-Enginehouse Stall-Compressed Air	All Switchers	Loco.Unit	
5-21	Inspect, Clean and Adjust Load Regulator-(3 month inspection)-Enginehouse Stall	All Yard Switchers	Loco.Unit	
5-22	Lubricate Electrical Equipment-(3 month inspection)-Enginehouse Stall-Engines not Equipped with Sealed Bearings	All BS & EMD Yard Switchers	Loco.Unit	
5-23	Lubricate Electrical Equipment-(3 month inspection)-Enginehouse Stall-Engines not Equipped with Sealed Bearings	Alco Yard Switchers	Loco.Unit	
5-30	Check Operation and Calibration of All Alarm and Safety Switches (6 month inspection)-Enginehouse Stall	All BS and ES Locos.	Loco.Unit	

Oper. No.	Description	Equipment	Prod.-Unit	Loc.
5-31	Check Operation and Calibration of All Alarm and Safety Switches (6 month inspection)-Enginehouse Stall	All Alco Switchers	Loco.Unit	
5-32	Lubricate Air Operated Piston Leathers (6 month inspection)-Enginehouse Stall	All Switchers	Loco.Unit	
5-40	Di-Electric Test (Hy-Potential Test)	All Switchers	Loco.Unit	
5-61	Renew Brush	D.E.Locos.	Brush	
5-200	Monthly Inspection-Electrical Portion-Diesel Electric Locomotives-Process Line	D. E. Locos.	Loco.Unit	

Order No	Description	Equipment	Prod.-Unit	Loc.
6-10	Cleaning and Polishing-Monthly-Enginehouse Stall	D.E. Road Switchers	Loco.Unit	
6-11	Cleaning and Polishing-Monthly-Enginehouse Stall	All D.E. Yard Switchers	Loco.Unit	
6-20	Clean and Touch-Up Paint Locomotive Hand Holds	D. E. Switchers	Loco.Unit	
6-21	Inspect, Clean and Paint Fuel Gages and Fuel Cut-Off	D. E. Switchers	Loco.Unit	
6-22	Clean and Touch-Up Paint Locomotive Cab	D. E. Yard Switchers	Loco.Unit	
6-23	Clean and Paint Locomotive Trucks	D. E. Yard Switchers	Loco.Unit.	
6-24	Clean and Touch-Up Paint Locomotive Body	D. E. Yard Switchers	Loco.Unit	
6-30	Wash Locomotive Unit and Clean Cab	Rd. and Rd. Switchers	Loco.Unit	

Oper.No	Description	Equipment	Prod.-Unit	Loc
6-31	Wash Locomotive Unit and Clean Cab	D. E. Yard Switchers	Loco.Unit	
6-32	Wash Exterior of Road and Road Switcher	Rd. and Rd. Switchers	Loco.Unit	
6-33	Clean Cab and Windows-Road Freight Locomotive Units (A only)		Loco.Unit	
6-34	Wash Diesel Electric Locomotives on Wash Rack	D.E. Locos.	Loco.Unit	
6-200	Monthly Inspection-Cleaning Portion-Diesel Electric Locomotives-Process Line	D. E. Locos.	Loco.Unit	

Oper. No	Description	Equipment	Prod.-Unit	Loc
8-10	Clean and Assemble Filters	Loco. Filters	Filter	
8-11	Clean Air Intake Filters-Safe-N-Easy Air Filterwasher, Safe-N-Easy Air Filter Oiler		1 Air In- take Filter	
8-50	Unload Traction Motor	Traction	Traction	
9-50	Transfer Coal from River Barge to Railroad Cars			
11-10	Electrical Inspection of Pool Cabin Car	Frt. Cabin Car	Cabin Car	

Oper.No	Description	Equipment	Prod.-Unit	Loc
19-800	Travel Time-Associated with Servicing Diesel Locomotives with Fuel Trucks-To be used with Standard for Servicing and Inspecting Diesel Electric Locomotives with Fuel Truck.	Yard Diesel Loco.	Occur.	
19-801	Prepare Fuel Truck	Fuel Truck	Occur.	
19-802	Service Locomotive Units	D.E. Loco. Units	Loco.Unit	
19-803	Service and Inspect Locomotive Units	D.E. Loco. Units	Loco.Unit	
19-804	Fuel Facilities other than Locomotives		Occ./Gal.	
19-805	Inspect and Service Locomotives-Over 1200 HP		Loco.Unit	
19-806	Service and Inspect Switchmobile-Use Fuel Truck	Switchmobile	Occur.	
19-807	Service Wreck Derrick-Use Fuel Truck	Wreck Derrick	Occur.	
19-808	Fill Fuel Truck with Sand		Occur.	
19-809	Pump Fuel into Fuel Truck		Occur.	

